


Boomer 65

Portable speaker


Operation manual

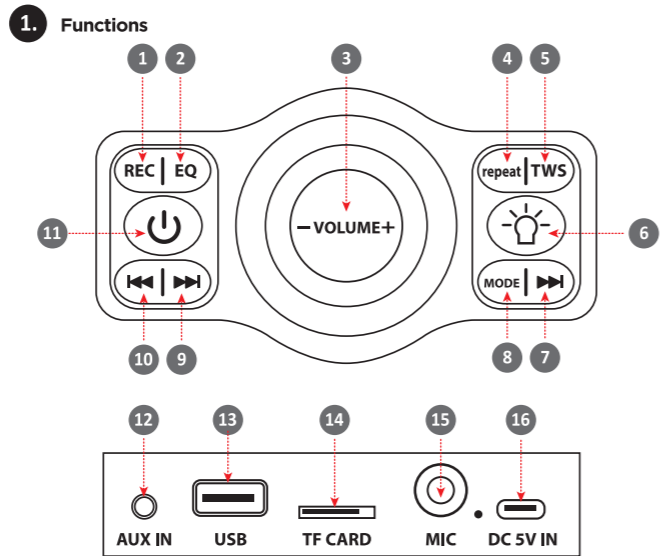

- | | |
|---|---------------------------------------|
| 1 Microphone recording (to the TF or USB) | 9 Next track/Next FM station |
| 2 Click - EQ presets select. Long press - adjustment menu (bass, treble, mic. volume) | 10 Previous track/Previous FM station |
| 3 Volume control | 11 On/Off |
| 4 Track repeat mode "one/all" (for TF or USB mode only) | 12 AUX |
| 5 TWS mode | 13 USB flash drive slot** |
| 6 Backlight mode* | 14 microSD card connector** |
| 7 Play-Pause | 15 Microphone jack |
| 8 Selecting BT\FM\AUX\MP3 mode | 16 Type-C power connector |

*To improve radio reception quality, turn off the backlight
 **The flash drive (USB, microSD) must be up to 64 GB in size and formatted in FAT32

2. Remote control

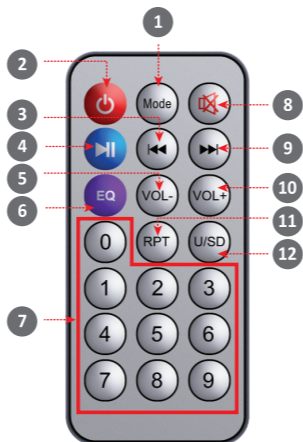


- 1 Switching FM/BT/AUX/MP3 modes
- 2 On/Off
- 3 Previous track/Previous station FM
- 4 Play-pause/Automatic FM station search
- 5 Volume -
- 6 Select equalizer presets
- 7 Enter MP3 track number/Enter FM station number
- 8 Mute
- 9 Next track/Next FM station
- 10 Volume +
- 11 Track repeat mode "one/all" (for TF or USB mode only)
- 12 Select microSD or USB card

3. Charging




4. Bluetooth connection

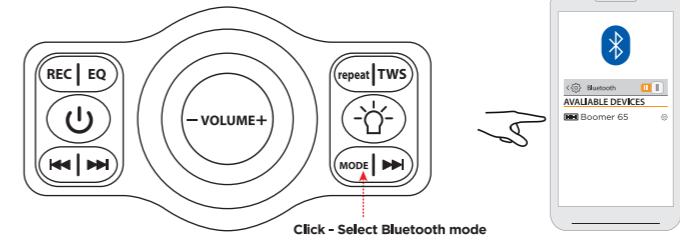


5. Stereo system of two Boomer 65 (TWS mode)

- 1 Turn off Bluetooth on your phone
- 2 Turn on both speakers
- 3 Turn on Bluetooth mode
- 4 Press and hold the TWS button for 3 seconds on the left speaker
- 5 Wait until the speakers connect
- 6 Turn on Bluetooth on your phone and connect to Boomer 65

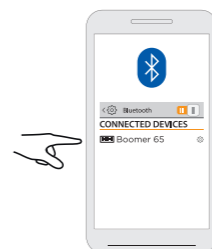

6. AUX playback

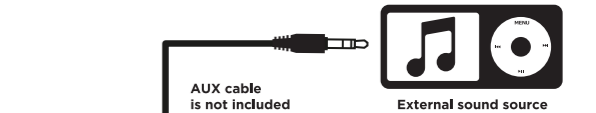

Cable 3,5 mm (M) - 3,5 mm (M)

